













 











 






 

 



 

 



 






 







Original		Recharge		Original		Recharge	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





Original	Recharge
CH+	CH+ / Page+
Info	Info / Angle
Vol+	Vol+
CH-	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-
Rec	Rec / Rec Mode
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow
Stop	Stop / Hold
>>	>> / Tune+
Red/↑/Zoom	Red / Netflix / Search
Red/↑/Zoom	Zoom / Size
Green/↓/Repeat	Green / APP / Repeat

Original	Recharge
Yellow/Root	Yellow / YouTube / Repeat
Blue/Title	Blue / Prime Video / Random

