



Original	Rechange
 Standby	 Power
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/10	 0
 10+	 Guide
 Goto	 Pre Ch
 Setup	 Options
 Play/Pause	 Play
 Play/Pause	 Pause

Original	Rechange
 Mute	 Mute
 A-Mode	 Smart
 Angle	 Format
 V-Mode	 D. Menu
 Prog	 Sleep
 OSD	 Info
 Source Select	 AV
 >> / Search+	 >>
 << / Search-	 <<
 Vol+	 Vol +
 Vol-	 Vol -
 >>I / Radio+	 >>I
 I<< / Radio-	 I<<
 Title / AM/FM	 TV/R
 Auto / Subtitle	 Subt
 Up	 Up
 Left	 Left





Original		Rechange		Original		Rechange	
	Enter		Ok				
	Right		Right				
	Down		Down				
	Audio / Memory		Dual				
	Menu / Mo/St		Menu				
	S.Effect		Red				
	CH Level		Green				
	Tone		Yellow				
	USB		Media				
	Step	 + 	Shift + Pause				
	Zoom	 + 	Shift + Eject				
	Repeat		Text				
	A-B	 + 	Shift + Text				
	Stop		Stop				

