






























 
 




Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guía	 Guide / EPG / -/--
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right

Original	Recharge
 Down	 Down
 Back	 Back / Return
 Voice	 Sound / Title
 +	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 <<	 << / Tune-
 Play/Pause	 Pause / Step / Freeze
 Play/Pause	 Play / Slow
 >>	 >> / Tune+
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

