 

 

 











 



 



 



 

 

 

 

 

 

 



 

 

 

 

 

 



 



 













Original		Rechange		Original		Rechange	
	Power		Power		10+		Guide / EPG / -/--
	USB/Card		AV / Input / RDS		Title		Sound / Title
	Display		Display / Media		Stop		Stop / Hold
	Mute		Mute / Dimmer		Setup		Setup / OPT /
	1		1		Zoom		Zoom / Size
	2		2		Audio		Audio / Lang I/II
	3		3		Subtitle		Subtitle / EQ
	4		4		Up		Up
	5		5		Down		Down
	6		6		Left		Left
	7		7		Right		Right
	8		8		OK		OK
	9		9		Vol+		Vol+
	0		0		Vol-		Vol-
	Repeat		Green / APP / Repeat		Play/Pause		Play / Slow
	A-B		Yellow / YouTube / Repeat		<<		<< / Tune-
	Goto		Text / Goto		>>		>> / Tune+





	Original	Rechange	Original	Rechange
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		
	LCD-Mode	 Smart / List		
	N/P	 Back / Return		
	Prog	 TV/Radio /		
	Menu/PBC	 Menu / Home		

