



Original	Recharge
Standby	Power
Source	AV / Input / RDS
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
P.Mode	Picture / Format
S.Mode	Sound / Title
Freeze	Pause / Step / Freeze
Txt	Text / Goto
Mix / Fav. List	Fav / Marker / PC
Size / Subtitle	Subtitle / EQ
Cancel / Audio	Audio / Lang I/II
Zoom	Zoom / Size
<< / Index	<< / Tune-
>> / Hold	>> / Tune+
I<< / Reveal	I<< / Preset-

Original	Recharge
>>I / Subpage	>>I / Preset+
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Left	Left
Enter	OK
Right	Right
Play / Pause	Play / Slow
Down	Down
Stop	Stop / Hold
Vol +	Vol+
Mute	Mute / Dimmer
CH +	CH+ / Page+
Vol -	Vol-
TV / Radio	TV/Radio /
CH -	CH- / Page-
1	1





	Original	Rechange
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	Display	Display / Media
	0	0
	Recall	Back / Return

	Original	Rechange

