



Original	Rechange
Standby	Power
Sub-T	Subtitle / EQ
TTX	Text / Goto
Mute	Mute / Dimmer
EPG	Guide / EPG / -/--
GOTO	Shift + Text /
Page +	CH+ / Page+
Audio	Audio / Lang I/II
Repeat	Shift + 0
Page -	CH- / Page-
Menu	Menu / Home
Up / CH +	Up
Up / CH +	Shift + Up
Exit	Exit / Cancel / Clear
Left / Vol -	Shift + Left
Left / Vol -	Left
OK	OK

Original	Rechange
Right / Vol +	Shift + Right
Right / Vol +	Right
FAV	Fav / Marker / PC
Down / CH -	Shift + Down
Down / CH -	Down
TV / Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Info	Info / Angle
7	7
8	8
9	9





Original		Rechange		Original		Rechange	
	0		0				
	<< Rev		<< / Tune-				
	>> Fwd		>> / Tune+				
	I<< Prev		I<< / Preset-				
	>>I Next		>>I / Preset+				
	Play		Play / Slow				
	Pause / Timeshift		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				
	Red / PVR		Red / Netflix / Search				
	Green / V-Format		Shift + Green / APP /				
	Green / V-Format		Green / APP / Repeat				
	Yellow / Aspect		Shift + Yellow / YouTube /				
	Yellow / Aspect		Yellow / YouTube / Repeat				
	Blue / Timer		Blue / Prime Video / Random				
	Blue / Timer		Shift + Blue / Prime				

 

 

 



 

 



 
 
 
 
 


 
 

 
 
 

 
 




	Original	Rechange	Original	Rechange
	Power	Power		Vol+
	SUB-T	Subtitle / EQ		FAV
	TTX	Text / Goto		Down/CH-
	Mute	Mute / Dimmer		Tv/Radio
	EPG	Guide / EPG / -/--		1
	Goto	Shift + Text /		2
	Page+	CH+ / Page+		3
	Lang	Audio / Lang I/II		Recall
	Repeat	Shift + Green / APP /		4
	Page-	CH- / Page-		5
	Menu	Menu / Home		6
	Up/CH+	Up		Info
	Exit	Exit / Cancel / Clear		7
	Left	Left		8
	Vol-	Vol-		9
	OK	OK		0
	Right	Right		<<
				<< / Tune-





Original		Recharge	
	>>		>> / Tune+
	l<<		l<< / Preset-
	>>l		>>l / Preset+
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Red		Red / Netflix / Search
	PVR		Setup / OPT /
	Green		Green / APP / Repeat
	V-Format		Picture / Format
	Yellow		Yellow / YouTube / Repeat
	Aspect		AV / Input / RDS
	Blue		Blue / Prime Video / Random
	Timer		Sleep / Timer

Original		Recharge	

