














 
 


 









 
 


| Original | Recharge |
|---|----------|
|  | Power |
|  | Source |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | TV |
|  | 0 |
|  | Recall |
|  | V+ |
|  | Mute |
|  | P+ |

| Original | Recharge |
|---|----------------|
|  | V- |
|  | World/Internet |
|  | P- |
|  | Menu |
|  | Q.Menu |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Down |
|  | Back |
|  | Exit |
|  | i |
|  | Music/Camera |
|  | TV Guide |
|  | */O |
|  | */Q |





| Original | Recharge |
|--|---|
|  [=]/Text |  Text / Goto |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Lang |  Audio / Lang I/II |
|  [=].. |  Sound / Title |
|  [-O-] |  Setup / OPT / |
|  << |  << / Tune- |
|  |  Pause / Step / Freeze |
|  >> |  >> / Tune+ |
|  Rec |  Rec / Rec Mode |
|  ▶ |  Play / Slow |
|  ■ |  Stop / Hold |
| | |
| | |
| | |

| Original | Recharge |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

