





 









 






 








 
 




 



 

 















 

 
 

 






Original	Recharge	Original	Recharge
	Power		Power
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Guide		Guide / EPG / -/--
	3D		Eject / Surround
	Ambilight		Display / Media
	Source		AV / Input / RDS
	TV		TV/Radio /
	[<>]/Format		Picture / Format
	Home		Menu / Home
	Smart Tv		Smart / List
	≡/List		Shift + Smart / List
	[i]/Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	III/Options		Setup / OPT /
	Back		Back / Return
	CH-		CH- / Page-
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Vol+		Vol+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Original		Recharge		Original		Recharge	
1 . #	1	TV 1	1				
2 ABC	2	DVD 2	2				
DEF 3	3	CD - STB 3	3				
4 GHI	4	VIDEO 4	4				
5 JKL	5	TAPE 5	5				
MNO 6	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
0 _	0	HDMI - SAT 0	0				
TEXT	[≡]/Text	GOTO TEXT	Text / Goto				

