





























 
 

 




Original	Rechange	Original	Rechange
Power		Power	
Recall		Back / Return	
CC		Subtitle / EQ	
Text		Text / Goto	
Smart		Smart / List	
Sleep		Sleep / Timer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Reset		Exit / Cancel / Clear	


















Original	Rechange	Original	Rechange
CH / Guide		Guide / EPG / -/--	
Up		Up	
M		Menu / Home	
A / CH		Info / Angle	
Down		Down	
Vol+		Vol+	
Vol-		Vol-	
Left / -		Left	
Right / +		Right	
Mute		Mute / Dimmer	
CH+		CH+ / Page+	
CH-		CH- / Page-	
A		Red / Netflix / Search	
B		Green / APP / Repeat	
C		Yellow / YouTube / Repeat	
D		Blue / Prime Video / Random	
G		Shift + Yellow / YouTube / Repeat	

















 









Original	Rechange	Original	Rechange
Power	 Power		
Recall	 Back / Return		
CC	 Subtitle / EQ		
Text	 Text / Goto		
Smart	 Smart / List		
Sleep	 Sleep / Timer		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Reset	 Exit / Cancel / Clear		


















Original	Rechange	Original	Rechange
Up	 Up		
CH / Guide	 Guide / EPG / -/-		
Down	 Down		
M	 Menu / Home		
Vol+	 Vol+		
A / CH	 Info / Angle		
Vol-	 Vol-		
Mute	 Mute / Dimmer		
Left / -	 Left		
Right / +	 Right		
CH+	 CH+ / Page+		
CH-	 CH- / Page-		
A	 Red / Netflix / Search		
B	 Green / APP / Repeat		
C	 Yellow / YouTube / Repeat		
D	 Blue / Prime Video / Random		
Clock	 Shift +  Sleep / Timer		













 











Original	Recharge	
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Recharge	
CH / Guide		Guide / EPG / -/--
Up		Up
Down		Down
A / CH		Info / Angle
M		Menu / Home
Right / +		Right
Left / -		Left
Vol+		Vol+
Vol-		Vol-
Mute		Mute / Dimmer
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
E		Shift + Red / Netflix / Search



