



Original	Recharge
	Power
	Guide
	Tv Input
	AV Input
	Menu
	Text
	[≡◆]/STTL
	[+]/Aspect
	i
	Exit
	Netflix
	APPS
	Left
	Up
	Right
	Home
	OK

Original	Recharge
	Power
	Guide / EPG / -/--
	AV / Input / RDS
	Shift + AV / Input / RDS
	Menu / Home
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Info / Angle
	Exit / Cancel / Clear
	Shift + Red / Netflix / Search
	Smart / List
	Left
	Up
	Right
	Shift + Menu / Home
	OK

Original	Recharge
	Option
	Down
	Back/Return
	Red
	Green
	Yellow
	Blue
	Vol+
	Mute
	PR+
	Vol-
	PR-
	1
	2
	3
	4
	5

Original	Recharge
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5





Original		Recharge		Original		Recharge	
	6		6				
	7		7				
	8		8				
	9		9				
	?/Help		D.Menu / Top				
	0		0				
	Last View		Fav / Marker / PC				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	>>I		>>I / Preset+				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				

