



Original	Recharge
 Power	 Power
 SD Card	 Shift + Media
 Input TV	 Shift + AV
 Input AV	 AV
 Menu	 Menu
 Aspect	 Format
 Viera Cast	 Shift + Smart
 Direct TV Rec	 Shift + Rec
 i	 Info
 Exit	 Exit
 Viera Tools	 Smart
 Viera Link	 Media
 Guide	 Guide
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right

Original	Recharge
 Down	 Down
 Option	 Options
 Back/Return	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 STTL	 Subt
 Index	 Shift + Info
 Hold	 Shift + Stop
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Recharge
7	7
8	8
9	9
0	0
Mute	Mute
Last View	Pre Ch
Vol+	Vol +
Vol-	Vol -
CH +	Ch +
CH -	Ch -
Power (lower)	Shift + Power
Rec	Rec
Programme -	Shift + Ch -
Programme +	Shift + Ch +
<<<	<<<
I<<<	I<<<
Play	Play

Original	Recharge
>>>	>>>
>>I	>>I
Stop	Stop
Pause/Step	Pause







Original	Recharge	Original	Recharge
 Power (lower)	 Power		
 Rec	 Rec		
 Programme -	 Ch -		
 Programme +	 Ch +		
 <<<	 <<<		
 I<<<	 I<<<		
 Play	 Play		
 >>>	 >>>		
 >>I	 >>I		
 Stop	 Stop		
 Pause/Step	 Pause		

