



Original	Recharge
Power	Power
Menu	Menu
Guide	Guide
Input Tv	TV/R
Input AV	AV
i	INFO
X/Exit	EXIT
APPS	APP MEDIA
Netflix	SHIFT + APP MEDIA Shift + Media
Home	HOME SMART Smart
Option	SETTINGS OPT Options
Back/Return	RETURN BACK Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK

Original	Recharge
Red	A Red
Green	B Green
Yellow	C Yellow
Blue	D Blue
Text	REPEAT TEXT Text
STTL	AD SUBT Subt
Aspect	PICTURE FORMAT Format
Vol+	+ VOL Vol +
Vol-	VOL - Vol -
Mute	MUTE Mute
CH+	+ CH Ch +
CH-	CH - Ch -
1	1
2	2
3	3
4	4
5	5





	Original	Recharge	Original	Recharge
	6			
	7			
	8			
	9			
	0			
	eHelp			
	Last View			
	<<			
	Play			
	>>			
	I<<			
	Pause			
	>>I			
	Stop			
	Rec			

