



Original	Recharge
 Power	 Power
 Sleep	 Sleep
 Clock/Timer	 Shift + AV
 Play/Rec	 Eject
 Program	 Shift + Sleep
 Play Mode	 Shift + Play
 Repeat	 Text
 Music Port	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Recharge
 0	 0
 ≥10	 Guide
 Del	 Back
 CD Play/Pause	 Play
 CD Play/Pause	 Up
 Tuner/Band	 TV/R
 Tuner/Band	 Left
 Stop / Clear	 Exit
 Stop / Clear	 Stop
 Stop / Clear	 Ok
 USB Play/Pause	 Pause
 Tape Play	 Rec
 USB Play/Pause	 Right
 Tape Play	 Down
 Vol-	 Vol -
 Vol+	 Vol +
 ← Album	 Ch -





Original		Recharge		Original	Recharge
BUM	Album →	+ CH	Ch +		
V/REW	I<< / V / REW	⏪	I<<		
V/REW	I<< / V / REW	⏩	>>		
^/FF	>>I / ^ / FF	⏪	>>I		
^/FF	>>I / ^ / FF	⏩	>>		
ENTER	Enter	HOME SMART	Smart		
SURROUND	Surround	SHIFT + SOUND DUAL	Shift + Dual		
PRESET EQ	Preset EQ	SETTINGS OPT	Options		
BASS/ TREBLE	Bass/Treble	SOUND DUAL	Dual		
DISPLAY	Display	DISPLAY INFO	Info		
DIMMER	Dimmer	ECO 3D	3D		
AUTO OFF	Auto Off	TIMER AV	AV		
MUTING	Muting	MUTE	Mute		

