

 



 




 












 













 
























 








Original	Recharge	Original	Recharge
 Off/On	 Power	 Cancel	 Exit / Cancel / Clear
 Sleep	 Sleep / Timer	 Random	 Blue / Prime Video / Random
 Display	 Display / Media	 Repeat	 Green / APP / Repeat
 FM Mode	 AV / Input / RDS	 CD	 Shift + 3
 Tuner / Band	 Shift + 6	 CD Pause	 Pause / Step / Freeze
 1	 1	 CD I<<</>>>	 << / Tune-
 2	 2	 CD I<<</>>>	 I<< / Preset-
 3	 3	 CD >>>/<<<	 >> / Tune+
 4	 4	 CD >>>/<<<	 >>I / Preset+
 5	 5	 CD Play	 Play / Slow
 6	 6	 CD Stop	 Stop / Hold
 7	 7	 TAPE Reverse	 Menu / Home
 8	 8	 TAPE Counter	 Info / Angle
 9	 9	 TAPE Deck 1/2	 Smart / List
 10/0	 0	 TAPE Rec Pause	 Shift + Rec / Rec Mode
 +10	 Guide / EPG / -/--	 TAPE <<	 Down
 Program	 TV/Radio /	 TAPE <<	 Shift + << /

Program

Tune-



