







 



 






 










 
 


 

 
 
 





 



 



 



 
 


 







Original	Recharge	Original	Recharge
 Power	 Power	 Green	 Green / APP / Repeat
 Stop	 Stop / Hold	 Yellow	 Yellow / YouTube / Repeat
 Pause	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode	 i+/Info	 Info / Angle
 <<	 << / Tune-	 Options	 Setup / OPT /
 Play	 Play / Slow	 Up	 Up
 >>	 >> / Tune+	 Left	 Left
 ([/])	 Zoom / Size	 OK	 OK
 *	 D.Menu / Top	 Right	 Right
 [<>]	 Picture / Format	 Back	 Back / Return
 TV GUIDE	 Guide / EPG / -/--	 Down	 Down
 SEARCH	 Shift + Red / Netflix / Search	 Multiview	 Display / Media
 SOURCES	 AV / Input / RDS	 Vol+	 Vol+
 SMART TV	 Smart / List	 List	 Shift + Smart / List
 HOME	 Menu / Home	 CH+	 CH+ / Page+
 TV EXIT	 Exit / Cancel / Clear	 Vol-	 Vol-
RED	Red / Netflix / Search	Mute	Mute / Dimmer



