



Original	Recharge
Power	Power
CD Direct 1	1
CD Direct 2	2
CD Direct 3	3
Repeat	Green / APP / Repeat
Shuffle	Blue / Prime Video / Random
Program	TV/Radio /
Sleep	Sleep / Timer
Timer	Shift + Sleep / Timer
Display	Display / Media
Side (only)	Guide / EPG / -/--
Pause	Pause / Step / Freeze
Mute	Mute / Dimmer
Vol-	Vol-
Vol+	Vol+
Play	Play / Slow
Stop	Stop / Hold



 



 



















 







Original	Recharge
I<	I<< / Preset-
>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Inc.Surr.	AV / Input / RDS
Flat	Picture / Format
Loudness	Zoom / Size
Bass-	Down
Bass+	Up
Treble-	CH- / Page-
Treble+	CH+ / Page+
Balance L	Left
Balance R	Right



 

 

 

 

 

 

 

 







 

 



 













 

 



 

 

 

 



 
 
 







 

Original	Recharge
	 Green / APP / Repeat
	 Power
	 Blue / Prime Video / Random
	 TV/Radio /
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Display / Media
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+

Original	Recharge
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right





Original	Recharge
 Power	 Power
 Power AUX	 Shift + Power
 AUX	 7
 Program	 TV/Radio /
 Sleep	 Sleep / Timer
 Timer	 Shift + Sleep / Timer
 Display	 Display / Media
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Inc.Surr.	 AV / Input / RDS
 Flat	 Picture / Format
 Loudness	 Sound / Title

Original	Recharge
 Bass-	 Down
 Bass+	 Up
 Treble-	 CH- / Page-
 Treble+	 CH+ / Page+
 Balance L	 Left
 Balance R	 Right

