




 
 





Original	Rechange
 Power	 Power
 Mute	 Mute
 Timer	 AV
 Clear	 Exit
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Up	 Up
 Left / << / <<	 Left
 Left / << / <<	 <<
 Left / << / <<	 I<<
 Play / Pause	 Ok
 Play / Pause	 Play
 Play / Pause	 Pause
 Right / >>I / >>	 Right
 Right / >>I / >>	 >>
 Right / >>I / >>	 >>I

Original	Rechange
 Down	 Down
 Repeat / ST/Mono	 Text
 Repeat	 Shift + Text
 EQ	 Smart
 P.Bass	 Media
 Stop	 Stop

