

 
 
 



 
 








 

 

 

 



 
 

 
 


Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Timer	 Sleep / Timer
 0	 0
 Game	 Smart / List
 Page Up	 Shift + CH+ /
 EPG	 Guide / EPG / -/--
 Recall	 Back / Return

Original	Rechange
 Page Down	 Shift + CH- /
 Fav	 Fav / Marker / PC
 Info	 Info / Angle
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Menu	 Menu / Home
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Red / Scan	 Red / Netflix / Search
 Green / Zoom	 Zoom / Size
 Green / Zoom	 Green / APP / Repeat





Original	Rechange	Original	Rechange
 Yellow / Pause	 Shift + Pause / Step /		
 Yellow / Pause	 Yellow / YouTube / Repeat		
 Blue / TV/Radio	 TV/Radio /		
 Blue / TV/Radio	 Blue / Prime Video / Random		
 Audio	 Audio / Lang I/II		
 Subtl	 Subtitle / EQ		
 TXT	 Text / Goto		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Play/Pause	 Pause / Step / Freeze		
 Play/Pause	 Play / Slow		
 Rec	 Rec / Rec Mode		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Slow	 Shift + Play /		
 Stop	 Stop / Hold		

Original	Rechange

