



Original		Rechange		Original		Rechange	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat





Original	Rechange
	Blue Blue / Prime Video / Random
	TTX Text / Goto
	INDEX D.Menu / Top
	HOLD Shift + Stop /
	I/II/Audio Audio / Lang I/II
	REC Rec / Rec Mode
	Repeat/Rec Shift + Green / APP / REPEAT
	REVEAL Stop / Hold
	PLAY Play / Slow
	PAUSE Pause / Step / Freeze
	SIZE Zoom / Size
	SUBTITLE Subtitle / EQ
	<</Subpage << / Tune-
	Tune+ >> / Tune+
	TV/RADIO TV/Radio /
	Preset- I<< / Preset-
	EPG Guide / EPG / -/--

Original	Rechange
	>>I >>I / Preset+
	FAV Fav / Marker / PC

