
































Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		*		Smart / List
	3		3		Up		Up
	4		4		i		Info / Angle
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	EPG		Guide / EPG / -/--		Exit		Exit / Cancel / Clear
	0		0		Netflix		Shift + Red / Netflix / Search
	TXT		Text / Goto		YouTube		Shift + Yellow / YouTube / Repeat A-B
	Vol+		Vol+		prime video		Shift + Blue / Prime / Random
	Source		AV / Input / RDS		USB		Shift + 8
	P+		CH+ / Page+		Red		Red / Netflix / Search





Original		Recharge		Original		Recharge	
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	<<		<< / Tune-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Audio		Audio / Lang I/II				

