



| Original | Recharge |
|---|---------------|
| PP | PP |
|  | Back / Return |
|  | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| P<P | P<P |
| 0 | 0 |
| -- | -- |
|  | Menu [M] |
|  | Info [i] |
|  | I-II |

| Original | Recharge |
|---|-----------------------------|
|  | Mute / Dimmer |
|  | Left |
|  | Up |
|  | Right |
|  | OK |
|  | Down |
|  | Vol- |
|  | Vol+ |
|  | CH- / Page- |
|  | CH+ / Page+ |
|  | Red / Sound |
|  | Green / Picture |
|  | Yellow / Feature |
|  | Blue / Prime Video / Random |
|  | Text / Goto |





| Original | | Rechange | |
|-----------------|-----------------------|-------------------|-----------------------|
| [≡o] | Sleep / Timer | TIMER SLEEP | Sleep / Timer |
| Hold | Stop / Hold | HOLD | Stop / Hold |
| [≡X] | Exit / Cancel / Clear | CLEAR EXIT CANCEL | Exit / Cancel / Clear |
| Mix / PIP Swap | Smart / List | LIST SMART | Smart / List |
| PIP / Size | Zoom / Size | SIZE ZOOM | Zoom / Size |
| PIP Down / [≡?] | I<< / Preset- | PRESET- | I<< / Preset- |
| PIP Up / Index | >>I / Preset+ | PRESET+ | >>I / Preset+ |
| [TV] | TV/Radio / | PROGRAM TV/RADIO | TV/Radio / |
| [AV] | AV / Input / RDS | RDS AV INPUT | AV / Input / RDS |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Rechange | |
|----------|--|----------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

