







 







 



 







 

 

 

 

 



 


 
 



 



 

 



 

 













Original		Rechange		Original		Rechange	
	Power		Power		Vol -		Vol-
	Source		AV / Input / RDS		Format		Picture / Format
	1		1		Prog -		CH- / Page-
	2		2		Red		Red / Netflix / Search
	3		3		Green		Green / APP / Repeat
	4		4		Yellow		Yellow / YouTube / Repeat
	5		5		Blue		Blue / Prime Video / Random
	6		6		Menu		Menu / Home
	7		7		Media		Display / Media
	8		8		Up		Up
	9		9		Left		Left
	Guide		Guide / EPG / -/--		OK		OK
	0		0		Right		Right
	Infos		Info / Angle		Back		Back / Return
	Vol +		Vol+		Back		Shift + Back / Return
	Mute		Mute / Dimmer		Down		Down
	Prog +		CH+ / Page+		Exit		Exit / Cancel / Clear





Original		Rechange		Original		Rechange	
	AD		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Text		Text / Goto				
	Radio		TV/Radio /				
	I<<		I<< / Preset-				
	<<		<< / Tune-				
	>>		>> / Tune+				
	>>I		>>I / Preset+				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				

