



Original	Rechange
Power	Power
TV / Video	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	GUIDE
Quick	Pre Ch
Mute	Mute
Sleep	Sleep
Skip	Exit

Original	Rechange
Display	Info
Up / Prog +	Ch +
Up / Prog +	Up
Down / Prog -	Ch -
Down / Prog -	Down
Right / Vol +	Vol +
Right / Vol +	Right
Left / Vol -	Vol -
Left / Vol -	Left
Menu	Menu
Menu	Ok
P-STD	Shift + Format
S-STD	Dual
PC Auto ADJ	Smart
PC / TV/PC	Media
M / S	TV/R
Surround	Shift + Dual



