





































Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Tv/Radio	 TV/Radio /
 4	 4
 5	 5
 6	 6
 ↑	 CH+ / Page+
 7	 7
 8	 8
 9	 9
 ↓	 CH- / Page-
 0	 0
 ←PR	 Back / Return
 PAL/NTSC	 Picture / Format

Original	Rechange
 Pause	 Pause / Step / Freeze
 EPG	 Guide / EPG / -/-
 Up/PR+	 Up
 Menu	 Menu / Home
 Left	 Left
 Vol-	 Vol-
 OK/List	 OK
 Right	 Right
 Vol+	 Vol+
 Info	 Info / Angle
 Down/PR-	 Down
 Exit	 Exit / Cancel / Clear
 [+]	 Zoom / Size
 FAV	 Fav / Marker / PC
 Record	 Rec / Rec Mode
 Stop	 Stop / Hold
 Audio	 Audio / Lang I/II





	Original	Recharge	Original	Recharge
	TXT	GOTO TEXT		Text / Goto
	Subtitle	EQ SUBTITLE		Subtitle / EQ
	Audio L/R	TITLE SOUND		Sound / Title
	Red	NETFLIX SEARCH		Red / Netflix / Search
	Green	APP REPEAT		Green / APP / Repeat
	Yellow	YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM		Blue / Prime Video / Random

