



Original		Rechange		Original		Rechange	
	Power		Power		7		7
	Mute		Mute / Dimmer		8		8
	Audio		Audio / Lang I/II		9		9
	TV / STB		AV / Input / RDS		0		0
	TV / R		TV/Radio /		SAT	+	Shift + 0
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	SUB		Subtitle / EQ		Fav		Fav / Marker / PC
	TXT		Text / Goto		PGUP		CH+ / Page+
	Multi		Display / Media		PGDN		CH- / Page-
	P / N		Picture / Format		Up		Up
	Recall		Back / Return		Right		Right
	1		1		FAV +		Vol+
	2		2		FAV -		Vol-
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK		OK
	6		6		Menu		Menu / Home



