



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Red/Reset	Red / Netflix / Search
Green/Repeat	Green / APP / Repeat
Yellow/Menu	Yellow / YouTube / Repeat
Blue/Zoom	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/--

Original	Rechange
OSD	Display / Media
P/N	Info / Angle
Setup	Setup / OPT /
L/R	Sound / Title
EQ	Subtitle / EQ
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Treb+	Shift + CH+ /
Treb-	Shift + CH- /
Sub+	CH+ / Page+
Sub-	CH- / Page-
Vol+	Vol+
Vol-	Vol-
<<	<< / Tune-



