






























| Original   | Recharge   | Original   | Recharge   |
|--|--|--|--|
|  Power    |  Power                  |  10+            |  Guide / EPG / -/--     |
|  Mute     |  Mute / Dimmer          |  Zoom           |  Zoom / Size            |
|  EQ       |  Subtitle / EQ          |  Step (TV-Mode) |  Shift + Pause / Step / |
|  1        |  1                      |  I<<            |  I<< / Preset-          |
|  2        |  2                      |  >>I            |  >>I / Preset+          |
|  3        |  3                      |  Stop           |  Stop / Hold            |
|  OSD      |  Display / Media        |  Play           |  Play / Slow            |
|  4        |  4                      |  Pause          |  Pause / Step / Freeze  |
|  5        |  5                      |  <<             |  << / Tune-             |
|  6        |  6                      |  >>             |  >> / Tune+             |
|  L/R     |  Text / Goto           |  Slow          |  Shift + Play /        |
|  7      |  7                    |  Up           |  Up                   |
|  8      |  8                    |  Menu         |  Menu / Home          |
|  9      |  9                    |  Left         |  Left                 |
|  P/N    |  Fav / Marker / PC    |  Enter        |  OK                   |
|  Repeat |  Green / APP / Repeat |  Right        |  Right                |
|  0/10   |  0                    |  Return       |  Back / Return        |





| Original  | Recharge  | Original | Recharge |
|---|---|----------|----------|
|  Down  |  Down                        |          |          |
|  Setup |  Setup / OPT /               |          |          |
|  Reset |  Exit / Cancel / Clear       |          |          |
|  Treb+ |  CH+ / Page+                 |          |          |
|  Sub+  |  Blue / Prime Video / Random |          |          |
|  Vol+  |  Vol+                        |          |          |
|  Input |  AV / Input / RDS            |          |          |
|  Treb- |  CH- / Page-                 |          |          |
|  Sub-  |  Yellow / YouTube / Repeat   |          |          |
|  Vol-  |  Vol-                        |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |
|   |   |          |          |

