





 

 

 




 

 

 





 
 

 







Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Sports	 TV/Radio /
 Home	 Menu / Home
 Guide	 Guide / EPG / -/--
 Extra	 Picture / Format
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Recharge		Original		Recharge	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Settings		Setup / OPT /				
	AD/Subt.		Subtitle / EQ				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	<< / Tune-		<< / Tune-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>> / Tune+		>> / Tune+				

