





























 










 






























Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AD/Subt		Subtitle / EQ
	P.Size		Zoom / Size
	E-Manual		D.Menu / Top
	Tools		Setup / OPT /
	TTX/MIX		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	PRE-CH		Back / Return
	Vol+		Vol+
	CH List		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Media.P		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Original	Recharge
<b>5</b>	TAPE <b>5</b>
<b>6</b>	TUNER <b>6</b>
<b>7</b>	AUX - HDD <b>7</b>
<b>8</b>	USB <b>8</b>
<b>9</b>	BLUETOOTH <b>9</b>
GUIDE	GUIDE EPG
<b>0</b>	HDMI - SAT <b>0</b>
<b>A</b>	NETFLIX SEARCH
<b>B</b>	APP REPEAT
<b>C</b>	YouTube REPEAT A-B
<b>D</b>	Prime Video RANDOM
RETURN	SHIFT + RETURN BACK

Original	Recharge

