










Original	Rechange	Original	Rechange
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 CH LIST	 Smart / List
 1	 1	 P-	 CH- / Page-
 2	 2	 Content	 D.Menu / Top
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Info	 Info / Angle
 7	 7	 Up	 Up
 8	 8	 Left	 Left
 9	 9	 OK	 OK
 TTX/MIX	 Text / Goto	 Right	 Right
 0	 0	 Return	 Shift + Back / Return
 PRE-CH	 Back / Return	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Red/A	 Red / Netflix / Search
 P+	 CH+ / Page+	 Green/B	 Green / APP / Repeat





Original	Recharge	Original	Recharge
Yellow/C	Yellow / YouTube / Repeat		
Blue/D	Blue / Prime Video / Random		
E-Manual	Display / Media		
P.Size	Zoom / Size		
AD/Subt	Subtitle / EQ		

Original	Recharge

