

 





 



 

 
 
 

 

 





 



 

 



Original	Recharge
Input Sel	AV / Input / RDS
Standby/on	Power
Open/Close	Eject / Surround
Tv Standby/On	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/DVD	TV/Radio /
0	0
A-B/Repeat	Shift + Yellow / YouTube /
I<<	I<< / Preset-

Original	Recharge
Subtitle	Subtitle / EQ
Repeat	Shift + Green / APP /
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Play/Pause	Play / Slow
>>	>> / Tune+
Tv Vol+	Vol+
Audio/Tv Mute	Mute / Dimmer
Prog +	CH+ / Page+
Tv Vol-	Vol-
Prog -	CH- / Page-
Menu	Menu / Home
Return	Back / Return
Up	Up
Left	Left
OK	OK





Original	Recharge
 Right	 Right
 Down	 Down
 Title List/Disc Menu	 D.Menu / Top
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Play List/Title Menu	 Setup / OPT /
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 Copy	 Text / Goto
 Marker	 Fav / Marker / PC
 Rec Mode	 Shift + Rec / Rec Mode
 Timer	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Rec	 Pause / Step / Freeze

Original	Recharge





	Original	Rechange
	DVD	Shift + 2
	HDD	Shift + 7
	Input Sel	AV / Input / RDS
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	Vol+	Vol+
	Mute	Mute / Dimmer
	Prog+	CH+ / Page+
	Vol-	Vol-

	Original	Rechange
	Prog-	CH - / Page-

