



Original		Recharge		Original		Recharge	
	Power		Power		>>		>> / Preset+
	Function / TV Source		AV / Input / RDS		<<		<< / Tune-
	Open / Close		Eject / Surround		>>		>> / Tune+
	Sleep		Sleep / Timer		Stop		Stop / Hold
	1		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3		3		Vol+		Vol+
	4		4		Mute		Mute / Dimmer
	5		5		Tuning/CH+		CH+ / Page+
	6		6		Tuning/CH+		Shift + >> /
	7		7		Vol-		Vol-
	8		8		Repeat		Shift + Green / APP /
	9		9		Tuning/CH-		CH- / Page-
	V-Sound		Shift + Sound / Title		Tuning/CH-		Shift + << /
	0		0		Disc Menu		D.Menu / Top
	DSP/EQ		Subtitle / EQ		Menu		Menu / Home
	I<<		I<< / Preset-		Title Menu		Sound / Title





Original	Recharge
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Dimmer	Shift + Mute / Dimmer
GIGA	Display / Media
S.Vol	Picture / Format
Audio Upscale / P.Bass	Audio / Lang I/II

Original	Recharge
S/W Level	Zoom / Size
Tuner Memory	Smart / List
Mo/St	Shift + Audio / Lang I/II
USB Rec	Rec / Rec Mode

