





 

 

 



 



 

 

 





 









 



Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--/[=+]	 Guide / EPG / -/--
 0	 0
 PRE-CH	 Back / Return
 Vol+	 Vol+
 P+	 CH+ / Page+
 Video/[=_]	 AV / Input / RDS
 Mute	 Mute / Dimmer

Original	Rechange
 Vol-	 Vol-
 P-	 CH- / Page-
 Menu/[=i]	 Menu / Home
 TV	 TV/Radio /
 Info/[=?]	 Info / Angle
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 [=]TTX/MIX	 Text / Goto
 [=0]	 Audio / Lang I/II
 [=♦]/P.Size/[<>]	 Zoom / Size
 [=♦]/Sleep/Timer	 Sleep / Timer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge
 Yellow	 Yellow / YouTube / Repeat
 Blue/P.Mode	 Blue / Prime Video / Random

Original	Recharge

