



































| Original | | Recharge | | Original | | Recharge | |
|---|------------------|---|-----------------------|---|------|---|------|
|  | Function |  | Menu / Home |  | Vol- |  | Vol- |
|  | Power/Standby |  | Power |  | Vol+ |  | Vol+ |
|  | Stop/Band |  | Stop / Hold | | | | |
|  | Play |  | Play / Slow | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | I<< |  | I<< / Preset- | | | | |
|  | >>I F.Skip/Up |  | >>I / Preset+ | | | | |
|  | -10 Track/Down |  | Left | | | | |
|  | +10 Track |  | Right | | | | |
|  | Folder Down |  | Down | | | | |
|  | Folder Up |  | Up | | | | |
|  | Clock Adj/Memory |  | Setup / OPT / | | | | |
|  | M-Up/Play Mode |  | Smart / List | | | | |
|  | ID3 |  | AV / Input / RDS | | | | |
|  | Timer/Sleep |  | Sleep / Timer | | | | |
|  | Mute |  | Mute / Dimmer | | | | |
|  | Preset EQ |  | Display / Media | | | | |

