





 
 
 

 



 
 




 









 







Original		Rechange	
	Power		Power
	Home		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back		Back
	Menu		Menu
	i		Info
	<<		<<
	>>		>>
	Play / Pause		Play
	Play / Pause		Pause
	<<		<<
	>>		>>
	Stop		Stop

[illegible]