






 



 

 



 



 

 

 



 



 



 

 
 


 









 



 

 

 
 
 



 

 

 

 



 

 






Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol -
	PP		Pre Ch		Up		Up
	Mute		Mute		Down		Down
	I-II		Dual		Right		Right
	P<P		Back		Left		Left
	-/--		Guide		M		Ok
	1		1		PR+		Ch +
	2		2		PR-		Ch -
	3		3		M		Menu
	4		4		Red/Sound		Red
	5		5		Green/Picture		Green
	6		6		Yellow/Feature		Yellow
	7		7		Blue/Install		Blue
	8		8		TV		TV/R
	9		9		AV		AV
	0		0		[≡]		Text
	Vol+		Vol +		[≡o]		Smart





Original	Recharge	Original	Recharge
 [=+]	 Subt		
 [=x]	 Options		
 [.:≡]	 Media		
 [=?]	 Format		
 [=i]	 List		
 [=♦]	 3D		
 [i]/Info	 Info		

