 

 

 
 


 



 
 
 
 


 







Original		Recharge		Original		Recharge	
	Power		Power		3		3
	[i+]		Info / Angle		4		4
	P.Info		Display / Media		5		5
	ATV		Shift + Smart / List		6		6
	DTV		Smart / List		7		7
	SAT		Shift + 0		8		8
	Radio		TV/Radio /		9		9
	Power Source		Shift + Power		Return		Shift + Back / Return
	<< Source		<< / Tune-		0		0
	Play Source		Play / Slow		Source		AV / Input / RDS
	>> Source		>> / Tune+		I/II/I-II		Audio / Lang I/II
	Option Source		Setup / OPT /		[<I>]		Picture / Format
	Rec Source		Rec / Rec Mode		AV Mode		Shift + AV / Input / RDS
	Rec Stop		Pause / Step / Freeze		Eco		Sound / Title
	Stop Source		Stop / Hold		Mute		Mute / Dimmer
	1		1		Vol+		Vol+
	2		2		PR+		CH+ / Page+





Original	Recharge	Original	Recharge
 Text	 Text / Goto	 Red	 Red / Netflix / Search
 Vol-	 Vol-	 Green	 Green / APP / Repeat
 PR-	 CH- / Page-	 Yellow	 Yellow / YouTube / Repeat
 Control	 D.Menu / Top	 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home		
 EPG	 Guide / EPG / -/--		
 Up	 Up		
 Left	 Left		
 OK	 OK		
 Right	 Right		
 End	 Exit / Cancel / Clear		
 Down	 Down		
 Back	 Back / Return		
 [...]	 Subtitle / EQ		
 [≡?]	 Eject / Surround		
 [≡o]	 Sleep / Timer		
 [≡+]	 Shift + Stop / Hold		

Original	Recharge	Original	Recharge
