





 

 

 

 

 

 

 





 













Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home
 Smart Colors	 Smart / List
 Info	 Info / Angle

Original	Rechange
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Back	 Back / Return
 Home	 Shift + Menu /
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 prime video	 Shift + Blue / Prime
 YouTube	 Shift + Yellow / YouTube /
 FPlay	 Shift + Green / APP /
 Audio	 Audio / Lang I/II



