 




Original	Rechange	Original	Rechange
 Operate	 Power	 Show View	 Info / Angle
 Open / Close	 Eject / Surround	 TV / DVD	 TV/Radio /
 1	 1	 Timer On / Off	 Sleep / Timer
 2	 2	 Time Shift	 Text / Goto
 3	 3	 Dubbing	 Vol-
 CH +	 CH+ / Page+	 P in P	 Picture / Format
 4	 4	 Input	 AV / Input / RDS
 5	 5	 HDD	 Shift + 7
 6	 6	 Start Menu	 Menu / Home
 CH -	 CH- / Page-	 DVD	 Shift + 2
 7	 7	 Rec List / DVD Top Menu	 Smart / List
 8	 8	 Up	 Up
 9	 9	 Original / Playlist / DVD Menu	 D.Menu / Top
 Direct	 Setup / OPT /	 Left	 Left
 -/--	 Guide / EPG / -/--	 Set / Enter	 OK
 0	 0	 Right	 Right
 C / Erase	 Shift + Exit / Cancel / Clear	 Exit	 Exit / Cancel / Clear





Original	Recharge	Original	Recharge
	 Down		Angle
	 Back / Return		Audio
	 Blue / Prime Video / Random		Subtitle
	 Red / Netflix / Search		REC
	 Green / APP / Repeat		REC Stop
	 Yellow / YouTube / Repeat		REC Pause
	 << / Tune-		Rec Mode
	 Play / Slow		Direct REC TV
	 >> / Tune+		Chapter Mark / RGB OFF
	 Pause / Step / Freeze		On Screen Tamper Proof
	 Stop / Hold		Display / Back Light
	 Shift + Play /		
	 I<< / Preset-		
	 >>I / Preset+		
	 Sound / Title		
	 Shift + Red / Netflix /		
	 Zoom / Size		
			Shift + Info / Angle
			Audio / Lang I/II
			Subtitle / EQ
			Rec / Rec Mode
			Shift + Stop /
			Shift + Pause / Step /
			Shift + Rec / Rec Mode
			Shift + Eject / Surround
			Fav / Marker / PC
			Vol+
			Display / Media

