



 













 





















 





 

 





 



 















Original		Rechange		Original		Rechange	
	On/Standby		Power		7		7
	Open/Close		Eject / Surround		8		8
	Tuner(Band)		Shift + 6		9		9
	ASPM		Sound / Title		Clock/Timer		Shift + Sleep / Timer
	RDS-PTY		Subtitle / EQ		0		0
	Display		Display / Media		10+		Guide / EPG / -/-
	Mute		Mute / Dimmer		Sleep		Sleep / Timer
	X-Bass		Audio / Lang I/II		Play Mode		Red / Netflix / Search
	Bass/Treble		Picture / Format		Folder		Back / Return
	1		1		(Tv Out)/Display iPod/iPhone		TV/Radio /
	2		2		Menu iPod/iPhone		Menu / Home
	3		3		Play/Pause iPod/iPhone		Shift + Play /
	Memory		D.Menu / Top		Display CD/USB		Smart / List
	4		4		Stop CD/USB		Stop / Hold
	5		5		Play/Pause		Play / Slow
	6		6		<< Tuning		<< / Tune-
	Clear		Exit / Cancel / Clear		I<<		I<< / Preset-





Original	Recharge		
 Preset Up	 Shift + >>I / Preset+		
 >>I	 >>I / Preset+		
 Tuning >>	 >> / Tune+		
 Vol-	 Vol-		
 Enter	 OK		
 Vol+	 Vol+		
 Equalizer Mode	 Setup / OPT /		
 Preset Down	 Shift + I<< / Preset-		
 Demo/Dimmer	 Shift + Mute / Dimmer		
 iPod/iPhone	 Shift + 1		
 CD	 Shift + 3		
 USB	 Shift + 8		
 Input/Audio In	 AV / Input / RDS		

Original	Recharge

