




 

 







 
 



 
 


 

 
 
 
 


 
 

 



 
 
 
 



 




 
 

 

 

 
 


 
 




 
 


 
 
 
 
 
 

 
 





	Original	Rechange	Original	Rechange
	Power			8
	Mute			9
	Info			0
	Angle			Time Shift
	Copy			Goto
	Zoom			Rec
	Tv Sys			Stop
	Music			<</FR
	Setup			>>/FF
	Menu			Play/Pause
	1			>>I/Next
	2			Subtitle
	3			Audio
	4			I<</Prev
	5			A-B
	6			Repeat
	7			Vol+
				Shift + Play
				Text
				Vol +





Original	Recharge	Original	Recharge
 Vol-	 Vol -		
 Home	 Smart		
 X/Return	 Exit		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Wuaki TV	 AV		
 Select	 List		
 Red	 Red		
 Green/EPG	 Green		
 Yellow/TTX	 Yellow		
 Blue	 Blue		

