 

 












Original	Recharge	Original	Recharge
 Power	 Power	 Left / Vol-	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right / Vol+	 Right
 2	 2	 Right / Vol+	 Vol+
 3	 3	 Down / CH-	 CH- / Page-
 4	 4	 Down / CH-	 Down
 5	 5	 Page+	 Smart / List
 6	 6	 Page+	 Shift + CH+ /
 7	 7	 Page+	 >> / Preset+
 8	 8	 Page-	 Display / Media
 9	 9	 Page-	 Shift + CH- /
 Menu	 Menu / Home	 Page-	 I<< / Preset-
 0	 0	 Fav	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear	 Guide	 Guide / EPG / -/-
 Up / CH+	 Up	 i	 Info / Angle
 Up / CH+	 CH+ / Page+	 TV/Radio	 TV/Radio /
 Left / Vol-	 Vol-	 Last	 Back / Return





Original	Recharge
Audio	Audio / Lang I/II
Pause	Pause / Step / Freeze
NTSC/PAL	Picture / Format
NTSC/PAL	Setup / OPT /
Sat	Shift + 0
Red / F1	Red / Netflix / Search
Green / F2	Green / APP / Repeat
Yellow / F3	Yellow / YouTube / Repeat
Blue / F4	Blue / Prime Video / Random

Original	Recharge

