



Original		Rechange		Original		Rechange	
	POWER		Power		NICAM / A2		Audio / Lang I/II
	MUTE		Mute / Dimmer		INPUT		AV / Input / RDS
	1		1		UP		Up
	2		2		DISPLAY		Display / Media
	3		3		LEFT		Left
	P. MODE		Picture / Format		OK		OK
	4		4		RIGHT		Right
	5		5		MENU		Menu / Home
	6		6		DOWN		Down
	S. MODE		Sound / Title		EXIT		Exit / Cancel / Clear
	7		7		RED		Red / Netflix / Search
	8		8		GREEN		Green / APP / Repeat
	9		9		YELLOW		Yellow / YouTube / Repeat
	SLEEP		Sleep / Timer		BLUE		Blue / Prime Video / Random
	ASPECT		Shift + Picture / Format		TEXT		Text / Goto
	0		0		PLAY / PAUSE		Play / Slow
	BACK		Back / Return		PLAY / PAUSE		Pause / Step / Freeze



