

 
 

 

 
 
 


 

 



 
 


 



 

 



 
 
 
 

 
 
 

 
 
 

 
 
 
 
 
 

 
 
 

 




 

 







Original		Recharge		Original		Recharge	
	Power		Power		Audio		Dual
	Open / Close		Eject		Clear		Exit
	HDD		Smart		Red		Red
	DVD		Media		Green / Subtitle		Green
	Prog +		Ch +		Green / Subtitle		Subt
	Prog -		Ch -		Yellow / Angle		Yellow
	Input		AV		Yellow / Angle		Format
	1		1		Blue / Play Mode		Blue
	2		2		Blue / Play Mode		Shift + Play
	3		3		System Menu		D. Menu
	4		4		Title List / Top Menu		Shift + Menu
	5		5		Title List / Top Menu		List
	6		6		Guide		Guide
	7		7		Menu		Menu
	8		8		TV / DVD		TV/R
	9		9		Info		Info
	0		0		Up		Up





Original	Recharge
Right	Right
Down	Down
Left	Left
Enter	Ok
Return	Back
Display	Shift + Info
I<< / Page -	I<<
<·	Shift + Left
·>	Shift + Right
>>I / Page +	>>I
<< / Day - / <I / <II	<<
Play	Play
>> / Day + / I> / II>	>>
TV Pause	Shift + Pause
Pause	Pause
Stop	Stop
Rec	Rec

Original	Recharge
Rec Stop	Shift + Stop
DUB HDD/DVD	Shift + Smart
Rec Mode	Shift + Rec
TV Vol +	Vol +
TV Vol -	Vol -
TV Prog +	Shift + Ch +
TV Prog -	Shift + Ch -
TV Power	Shift + Power
TV Input	Shift + AV

