


 
 







 
 



 

 




 

 

 
 

 
 
 



 



 




 

 
 



 

























 



 
 
 
 
 
 
 

 




Original		Recharge		Original		Recharge	
	Power		Power		Red		Red
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue		Blue
	4		4		Guide		Guide
	5		5		Rec List		List
	6		6		Input		AV
	7		7		*		Menu
	8		8		Up		Up
	9		9		Right		Right
	0		0		Down		Down
	[i+]		Info		Left		Left
	[≡]		Text		OK		Ok
	Google Play		Shift + Media		Back		Back
	Netflix		Media		TV		TV/R

Pas de fonction de commande vocale.





	Original	Recharge		Original	Recharge
	Home	 Smart		Exit	 Exit
	Vol+	 Vol +			
	Vol-	 Vol -			
	Recall	 Pre Ch			
	Mute	 Mute			
	CH+	 Ch +			
	CH-	 Ch -			
	Audio	 Dual			
	[...]	 Subt			
	Help	 D. Menu			
	<<	 <<			
	Play	 Play			
	>>	 >>			
	Rec	 Rec			
	Pause	 Pause			

Pas de fonction de commande vocale.

