 


 
 

 

 






 


 

 
 
 

 
 

 

 
 

 
 





 

 
 

 
 




 



 



 




	Original	Recharge	Original	Recharge
	Power		Power	
	Mute		Mute	
	[i+]/[?]		Info	
	A/B/[+]		TV/R	
	Input/[+]		AV	
	[]		Smart	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	-/--		Guide	
	Recall		Back	
	Timer/[≡i]		List	
	Timer/[X]		Sleep	
	Vol+		Vol +	
	Vol-		Vol -	
	Prog+		Ch +	
	Prog-		Ch -	
	(↔)		Dual	
	Menu		Menu	
	Up		Up	
	Left		Left	
	OK		Ok	
	Right		Right	
	Down		Down	
	[≡]		Text	
	Red/Sound		Red	
	Green/*		Green	





Original		Recharge		Original		Recharge	
	Yellow		Yellow				
	Blue/[+]		Blue				

