 



 
 
 



 

 


 


 
 
 

 

 

 
 
 
 
 





 

 

 



 
 
 
 

 

 

 
 



 


 
















| Original | Recharge |
|--|--|
|  Power |  Power |
|  Open / Close |  Eject |
|  HDD |  Media |
|  DVD |  Smart |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Audio |  Dual |
|  Subtitle |  Subt |
|  Prog+ |  Ch + |

| Original | Recharge |
|--|--|
|  Prog- |  Ch - |
|  Input Select |  AV |
|  TV / DVD |  TV/R |
|  Top Menu |  Shift + Menu |
|  Menu |  Menu |
|  System Menu |  D. Menu |
|  Chapter Mark |  Guide |
|  Mark Erase |  Pre Ch |
|  Title List |  List |
|  Timer |  Sleep |
|  Display |  Info |
|  Timer List |  Mute |
|  Up |  Up |
|  Left |  Left |
|  Enter |  Ok |
|  Right |  Right |
|  Down |  Down |





| Original | Recharge |
|---|---|
|  Return |  Back |
|  Options |  Options |
|  I<< |  I<< |
|  >>I |  >>I |
|  ⏏ |  Vol - |
|  ⏪ ⏩ |  Vol + |
|  << / <II / <I |  << |
|  ▶ |  ▶ |
|  >> / I> / II> |  >> |
|  Time / Text |  Text |
|  ⏸ |  ⏸ |
|  ⏏ |  ⏏ |
|  Rec |  Rec |
|  Rec Stop |  Shift + Stop |
|  Rec Mode |  Shift + Rec |
|  Synchro Rec |  Red |
|  TV Power |  Shift + Power |

| Original | Recharge |
|--|---|
|  TV Input |  Shift + AV |
|  TV Prog+ |  Shift + Ch + |
|  TV Vol+ |  Shift + Vol + |
|  TV Vol- |  Shift + Vol - |
|  TV Prog- |  Shift + Ch - |

