



Original		Recharge		Original		Recharge	
	System Off		Power		5		5
	Sleep		Sleep / Timer		6		6
	Tv Control On		Shift + Power		7		7
	Tape		Shift + 5		8		8
	DAT/MD		Shift + 2		9		9
	CD		Shift + 3		0		0
	Tuner		Shift + 6		>10		Guide / EPG / -/-
	Phono		Shift + 0		Index/Tv Video		TV/Radio /
	Video 1		Shift + 4		CH/Preset+		CH+ / Page+
	Video 2		Shift + 7		CH/Preset-		CH- / Page-
	Video 3		Shift + 8		DPC Mode		Picture / Format
	LD		Shift + 9		Band EQ		Green / APP / Repeat
	TV		Shift + Guide / EPG / -/-		Slope EQ		Yellow / YouTube / Repeat
	1		1		EQ Tone On/Off		Blue / Prime Video / Random
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right





Original	Recharge	Original	Recharge
Left	Left		
< Sound Field	<< / Tune-		
Sound Field Mode	>> / Tune+		
Sound Field	Red / Netflix / Search		
Rear Level+	Shift + CH+ /		
Rear Level-	Shift + CH- /		
Center Level+	Shift + Up		
Center Level-	Shift + Down		
Test Tone	Smart / List		
Bass Boost	Display / Media		
Master Vol+	Vol+		
Master Vol-	Vol-		
Muting	Mute / Dimmer		





Original		Rechange	
	System Off		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	>10		Guide / EPG / -/--
	<<		<< / Tune-
	>>		>> / Tune+
	l<<		l<< / Preset-
	>>l		>>l / Preset+
	D.Skip		Blue / Prime Video / Random

Original		Rechange	
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze













Original	Recharge
System Off	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10	Guide / EPG / -/-
Enter	OK
<</Sub CH-	<< / Tune-
>>/Sub CH+	>> / Tune+
Stop	Stop / Hold
<	Left

Original	Recharge
>	Right
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode





	Original	Recharge	Original	Recharge
	System Off			Pause / P in P
	1			Pause / Step / Freeze
	2			Rec / Rec Mode
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	<</Sub CH-			
	>>/Sub CH+			
	<</Posi			
	>> /Swap			
	Stop/Clear			
	Play			

