















 

 











 



Original	Recharge	Original	Recharge
On/Off	Power	Tracking Normal/Slow ▲	Up
TV/VTR	TV/Radio /	Index Mark	Info / Angle
Up	Shift + Up	Index Erase	Back / Return
Execute	Shift + OK	4	4
Menu	Menu / Home	5	5
Left	Shift + Left	6	6
Right	Shift + Right	Still Adjust I> Slow-	Shift + CH- /
Down	Shift + Down	Still Adjust I> Slow+	Shift + CH+ /
Counter Reset	Exit / Cancel / Clear	Tape Speed SP/LP	Setup / OPT /
Quick Timer	Sleep / Timer	Input Select	AV / Input / RDS
Audio Monitor	Audio / Lang I/II	7	7
Audio Dub	Sound / Title	8	8
1	1	9	9
2	2	Vol+	Vol+
3	3	Prog+	CH+ / Page+
Auto/Manu	Smart / List	<II Frame	Left
Tracking Normal/Slow ▼	Down	Frame II>	Right





Original

Rechange

 
 
 








 



















 

	Rec		Rec / Rec Mode
	-/--		Guide / EPG / -/--
	0		0
	Vol-		Vol-
	Prog-		CH- / Page-
	Hi-Speed REW		Shift + I<< / Preset-
	<< Search		Shift + << /
	Search >>		Shift + >> /
	I<< Index Search		I<< / Preset-
	Index Search >>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	<< REW		<< / Tune-
	Play		Play / Slow
	>> FF		>> / Tune+
	Stop		Stop / Hold

Original

Rechange








 





 

 

















Original	Rechange
 On/Off	 Power
 TV/VTR	 TV/Radio /
 Up	 Shift + Up
 Execute	 Shift + OK
 Menu	 Menu / Home
 Left	 Shift + Left
 Right	 Shift + Right
 Down	 Shift + Down
 Counter Reset	 Exit / Cancel / Clear
 Quick Timer	 Sleep / Timer
 Audio Monitor	 Audio / Lang I/II
 Audio Dub	 Sound / Title
 1	 1
 2	 2
 3	 3
 Auto/Manu	 Smart / List
 Tracking Normal/Slow ▼	 Down

Original	Rechange
 Tracking Normal/Slow ▲	 Up
 Index Mark	 Info / Angle
 Index Erase	 Back / Return
 4	 4
 5	 5
 6	 6
 Still Adjust I> Slow-	 Shift + CH- /
 Still Adjust I> Slow+	 Shift + CH+ /
 Tape Speed SP/LP	 Setup / OPT /
 Input Select	 AV / Input / RDS
 7	 7
 8	 8
 9	 9
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 <II Frame	 Left
 Frame II>	 Right





	Original	Rechange	Original	Rechange
	Rec	 Rec / Rec Mode		
	-/--	 Guide / EPG / -/--		
	0	 0		
	Vol-	 Vol-		
	Prog-	 CH- / Page-		
	Hi-Speed REW	 Shift + I<< / Preset-		
	<< Search	 Shift + << /		
	Search >>	 Shift + >> /		
	I<< Index Search	 I<< / Preset-		
	Index Search >>I	 >>I / Preset+		
	Pause	 Pause / Step / Freeze		
	<< REW	 << / Tune-		
	Play	 Play / Slow		
	>> FF	 >> / Tune+		
	Stop	 Stop / Hold		









 

 

 

 



















Original	Rechange	Original	Rechange
On/Off	Power	Tracking Normal/Slow ▲	Up
TV/VTR	TV/Radio /	Index Mark	Info / Angle
Up	Shift + Up	Index Erase	Back / Return
Execute	Shift + OK	4	4
Menu	Menu / Home	5	5
Left	Shift + Left	6	6
Right	Shift + Right	Still Adjust I> Slow-	Shift + CH- /
Down	Shift + Down	Still Adjust I> Slow+	Shift + CH+ /
Counter Reset	Exit / Cancel / Clear	Tape Speed SP/LP	Setup / OPT /
Quick Timer	Sleep / Timer	Input Select	AV / Input / RDS
Audio Monitor	Audio / Lang I/II	7	7
Audio Dub	Sound / Title	8	8
1	1	9	9
2	2	Vol+	Vol+
3	3	Prog+	CH+ / Page+
Auto/Manu	Smart / List	<II Frame	Left
Tracking Normal/Slow ▼	Down	Frame II >	Right









Original	Recharge
----------	----------



	Rec		Rec / Rec Mode
	-/--		Guide / EPG / -/--
	0		0
	Vol-		Vol-
	Prog-		CH- / Page-
	Hi-Speed REW		Shift + I<< / Preset-
	<< Search		Shift + << /
	Search >>		Shift + >> /
	I<< Index Search		I<< / Preset-
	Index Search >>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	<< REW		<< / Tune-
	Play		Play / Slow
	>> FF		>> / Tune+
	Stop		Stop / Hold

Original	Recharge
----------	----------





	Original	Rechange
	On/Off	 Power
	TV/VTR	 TV/Radio /
	Audio Monitor	 Audio / Lang I/II
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	Vol+	 Vol+
	Prog+	 CH+ / Page+
	-/--	 Guide / EPG / -/--
	0	 0
	Vol-	 Vol-

Original	Rechange
	 CH- / Page-

