

 
 


 
 


 









 
 




 

 


 


 




	Original	Rechange	Original	Rechange
	Power			Ok
	Mute			Up
	1			Down
	2			Right
	3			Left
	4			Vol +
	5			Vol -
	6			Ch +
	7			Ch -
	8			Stop
	9			Play
	0			Rec
	Thumb			>>
	Time Shift			<<
	Menu			EPG/BG-Music
	Exit			Shift + Options
	Info			Text
				Eject





Original	Recharge
	 Shift + Pre Ch
	 Options
	 Dual
	 Subt
	 Format
	 Shift + Text
	 I<<
	 >>I
	 Red
	 Green
	 Yellow
	 Blue

Original	Recharge

